

RBT18510 - BOTTOM SHELF

ITEM	P/N	DESCRIPTION	QTY
18	RBT18510-10	BLADE BOLT LATCH SOCKET	1
19	RBT18510-11	M/R SLING ASSEMBLY	2
21	RB DB3182-19	MAIN TRANSMISSION DRAIN TOOL QUILL ASSEMBLY	1
22	RB DB3182-23	MAIN TRANSMISSION DRAIN TOOL HOSE ASSEMBLY	1
23	RB DB3225C-17	FREE WHEELING CLUTCH DRAIN TOOL QUILL ASSEMBLY	1
24	RB DB3225C-19	FREE WHEELING CLUTCH DRAIN TOOL HOSE ASSEMBLY	1
25	RB DB3225L-13	T/R GEARBOX AND FREEWHEELING PACKAGING ASSY	1
26	RB DB3225L-15	T/R GEARBOX AND FREEWHEELING HOSE ASSY	1
27	RB6796941-14	STARTER SEAL GUIDE	1
28	RB6796941-18	STARTER SEAL INSTALL TOOL	1
29	RB6796941-201	STARTER SEAL REMOVAL TOOL	1
30	RB6796941-203	SLIDE HAMMER ASSEMBLY	1
31	RB877206-5-16	SWASH PLATE PITCH HORN BEARING REM./INST. TOOL	1
32	RBBP1404-1	K-FLEX DRIVE SHAFT TOOL	1
33	RBE2-10-1	PULLER, FUEL CARTRIDGE	1
34	RBGTMD12	M/R PILLOW BLOCK BOLT SOCKET	1
35	RBSC7028-P	SWASH PLATE PITCH HORN BEARING CUTTER	1
36	RBST2812-P	SWASH PLATE PITCH HORN BEARING SWAGING TOOL	1
37	RBT112800	PTO SEAL INSTALL TOOL	1
38	RBT18506	M/R MAST NUT SOCKET	1
39	RBT18524	OIL SUMP STRAIGHTENER	1
40	RBT18539	HELICOPTER LIFTING EYE	1
41	RBT18560	SEAL PULLER, ENGINE GEAR BOX	1
42	RBT18666	M/R RESTRAINT TOOL	1

